 

 
 
 
 







< Vinyl bag C >

No.	Illustration	Part Name	Q'ty
s-1		Clevis pin	2
s-2		Clip	1
s-3		Stopper	1
s-4		6 mm spring washer	1
s-5		6 mm bolt	1
s-6		10 mm plain washer	2
s-7		10 mm spring washer	2
s-8		Crown nut	2
s-9		Lever holder	2
s-10		6 mm bolt with spring washer	2


INSTALLATION GUIDE

The removed parts should be installed in the positions indicated in the chart below:

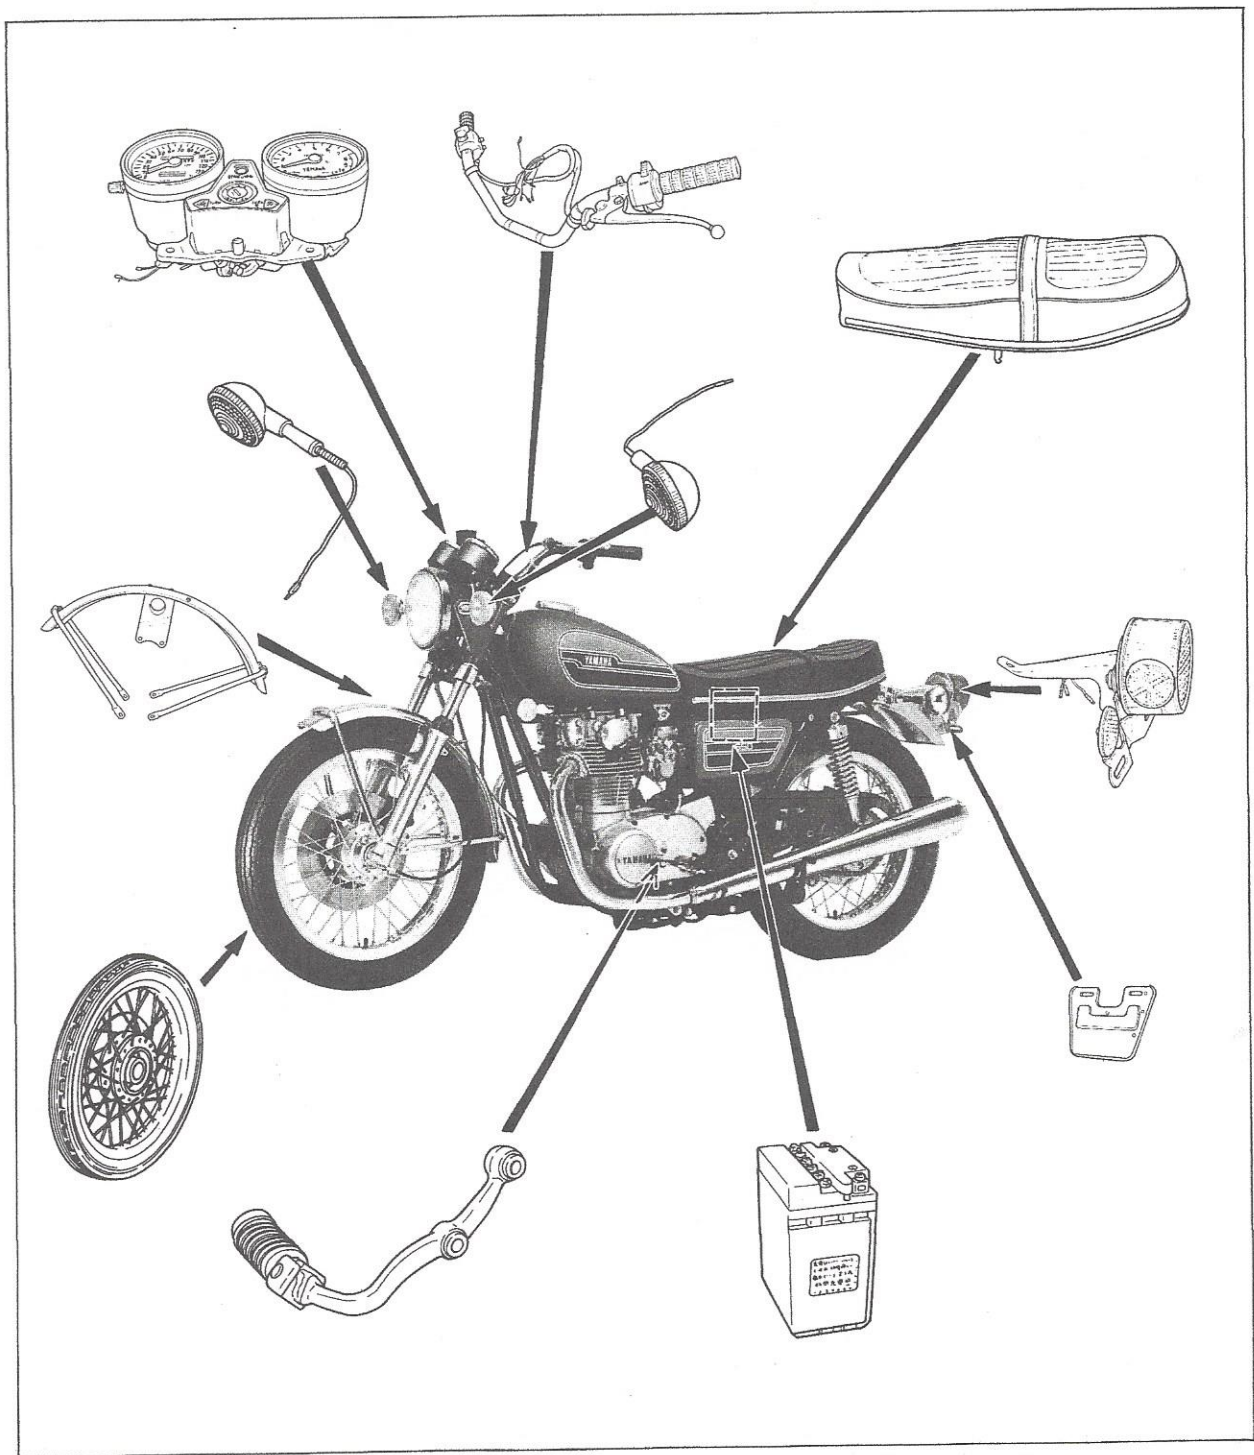

SET-UP PROCEDURES


Remove the front fender held between the rear tire and the rear fender. Next, remove the front wheel.

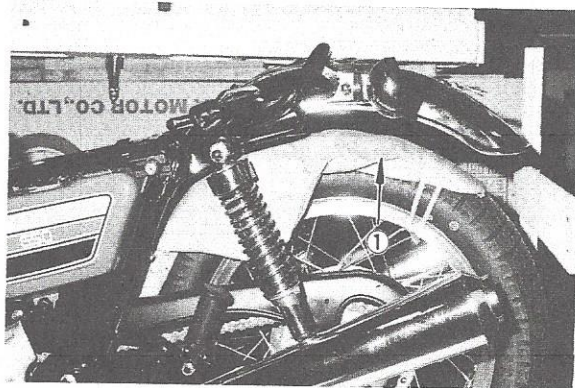

1. Front fender

Remove the seat and the front wheel.


Remove the nails from each corner of the crate, and remove the struts.

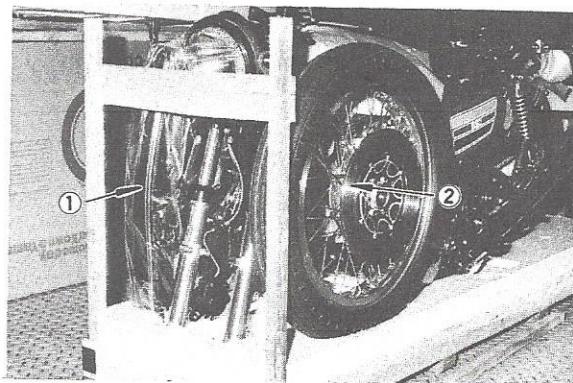

1. Seat 2. Front wheel

Lift up the machine, and remove the rear wheel section from the foam styrol base. Then take out the machine.

To install the front fender and front wheel, place a proper-size wooden box or a wooden block under the engine to keep the front of the machine raised off the floor. Take care so that the machine does not fall over.

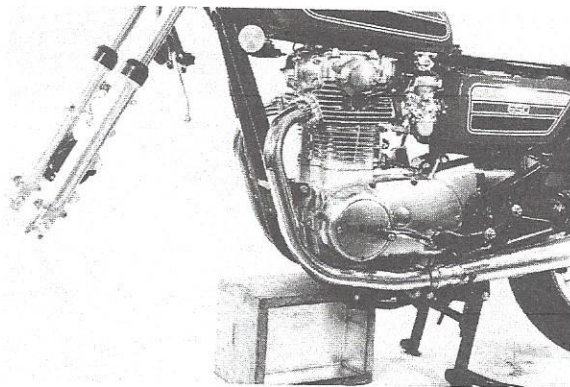

Insert the front fender between the front fork legs, and secure the fender using bolts with spring washers (r-7).

Tightening torque:

165 ~ 180 in-lb (1.9 ~ 2.1 m·kg)

