

STARTER

Ref. No.	Parts No.	Description	Q'ty			Applicable Machine No.	Remarks
			XS1	XS1F	XS2		
16- 1	256-15660-00	KICK AXLE ASS'Y	1				
	256-15660-01	KICK AXLE ASS'Y	1	1		005830~	
	256-15660-02	KICK AXLE ASS'Y		1	1	008422~	
16- 2	256-15654-00	HOLDER	2	2	2		
16- 3	256-15673-00	CLIP	1	1	1		
16- 4	256-15641-00	GEAR, kick (26T)	1				Interchangeable with new one
	256-15641-01	GEAR, kick (26T)	1	1		005530~	
	306-15641-00	GEAR, kick (25T)			1		
16- 5	256-15687-00	CLIP, kick	1	1	1		
16- 6	256-15666-00	SPACER (25.4-53-4)	1	1	1		
16- 7	256-15665-00	SPRING, kick	1	1	1		
16- 8	256-15664-00	GUIDE, spring	1	1	1		
16- 9	93342-22502	BEARING, thrust	1			Disused 008442~	
16-10	93102-25064	OIL SEAL (SD-25-35-7)	1	1	1		
16-11	256-15621-00	BOSS, kick crank	1	1	1		
16-12	97201-08030	BOLT	1	1	1		
16-13	256-15611-00-93	CRANK, kick	1	1	1		
16-14	93505-16006	BALL (5/16")	1	1	1		
16-15	168-15622-01	SPRING, boss stopper	1	1	1		
16-16	256-15615-00	WASHER	1	1	1		
16-17	93430-12022	CIRCLIP (E-12)	1	1	1		
16-18	214-15618-00	COVER, kick lever	1	1	1		