


TX680A Wiring Diagram

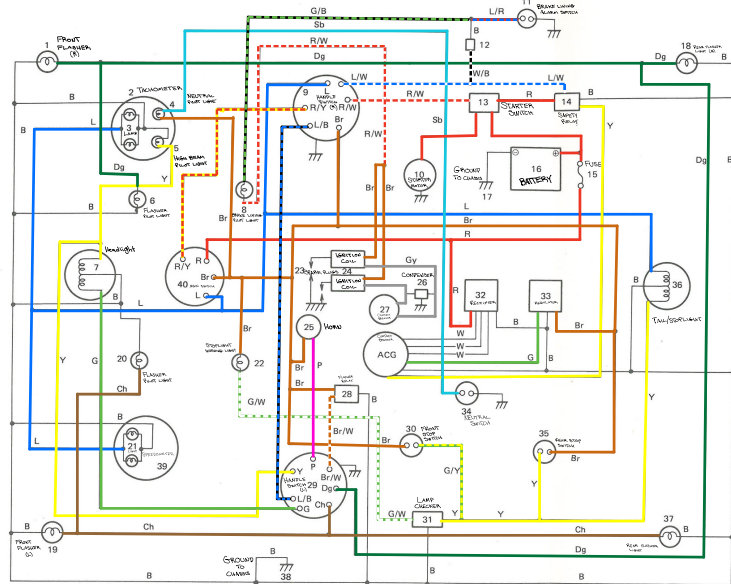

G/B . . . . . Green Black  
 B . . . . . Black  
 L . . . . . Blue  
 Y . . . . . Yellow  
 G . . . . . Green  
 Br . . . . . Brown  
 R . . . . . Red  
 G/W . . . . . Green/White  
 W/B . . . . . White/Black  
 L/R . . . . . Blue/Red  
 L/B . . . . . Blue/Black

R/Y . . . . . Red/Yellow  
 W . . . . . White  
 G/Y . . . . . Green/Yellow  
 L/W . . . . . Blue/White  
 R/W . . . . . Red/White  
 P . . . . . Pink  
 Br/W . . . . . Brown/White  
 Dg . . . . . Dark green  
 Ch . . . . . Chocolate  
 Sb . . . . . Sky blue

1. Front flasher light (R) 12V/27W.
2. Tachometer
3. Lamp 12V/3W.
4. Neutral pilot light 12V/3W x 2
5. High beam pilot light 12V/3W.
6. Flasher pilot light 12V/3W.
7. Headlight 12V, 50/40W.
8. Brake lining pilot light 12V/3W.
9. Handle switch (R)
10. Starter motor
11. Brake lining alarm switch
12. Diode
13. Starter switch
14. Safety relay
15. Fuse
16. Battery YB14L
17. Ground to chassis
18. Rear flasher light (R) 12V/27W.
19. Front flasher light (L)
20. Flasher pilot light 12V/3W.
21. Light 12V/3W x 2
22. Stoplight warning light 12V/3W.
23. Spark plug
24. Ignition coil
25. Horn
26. Condenser
27. Contact breaker
28. Flasher relay
29. Handle switch (L)
30. Front stop switch
31. Lamp checker
32. Rectifier
33. Regulator
34. Neutral switch
35. Rear stop switch
36. Tail/stoplight 12V, 32/3W.
37. Rear flasher light 12V/27W.
38. Ground to chassis
39. Speedometer
40. Main switch

Main switch	R	Br	R/Y	L	Key
OFF					Removable
I					Unremovable
II					Removable

Dimmer switch	Y	L/B	L
HI			
Lo			

Flasher switch	Ch	Br/W	Dg
L			
N			
R			

Horn switch	P	Ground
OFF		
ON		

Starter switch	L/W	Ground
OFF		
ON		

Light switch (R)	L/B	R/Y	L
OFF			
ON			

Kill switch	Br	R/W	L/W
OFF			
RUN			
OFF			